

# Quick Reference: Tiger 100 ATX (S1832) Jumpers

## Note for Pentium III 600+ MHz users.

There is no need to worry about setting the correct jumper settings for a Pentium III 600+ MHz because the CPU multiplier is hardwired into the CPU and changing jumper settings will not make any difference. The BIOS will automatically detect the correct CPU speed that is installed.

## CPU Settings for 66 MHz Bus

Clock Speed	JP 11	JP 12	JP 13	JP 14	Multiplier
233MHz	ON	OFF	OFF	ON	×3.5
266MHz	OFF	ON	ON	ON	×4.0
300MHz	OFF	ON	OFF	ON	×4.5
333MHz	OFF	OFF	ON	ON	×5.0
366MHz**	OFF	OFF	OFF	ON	×5.5
400MHz**	ON	ON	ON	OFF	×6.0
433MHz**	ON	ON	OFF	OFF	×6.5
466MHz**	ON	OFF	ON	OFF	×7.0

\*\* For Intel Celeron processors ONLY

## CPU Settings for 100 MHz Bus

Clock Speed	JP 11	JP 12	JP 13	JP 14	Multiplier
350MHz	ON	OFF	OFF	ON	×3.5
400MHz	OFF	ON	ON	ON	×4.0
450MHz	OFF	ON	OFF	ON	×4.5
500MHz	OFF	OFF	ON	ON	×5.0
550MHz	OFF	OFF	OFF	ON	×5.5
600MHz	ON	ON	ON	OFF	×6.0

## Hardware CMOS / Password Reset

	Default	Reset
JP3	1-2	2-3

## Infra Red / Floppy Drive Settings

IR/ FDD	JP4	JP8	JP9
2FDD	ON	1-2	1-2
1 IR / 1FDD (Default)	OFF	2-3	2-3